


Settings of the Bluetooth Printer

1. Open the file—“PrinterTESTV3.6” in the folder named as “Tools” in the optical disk.

Then start Printer software and follow the steps to set the printer. See the picture followed.

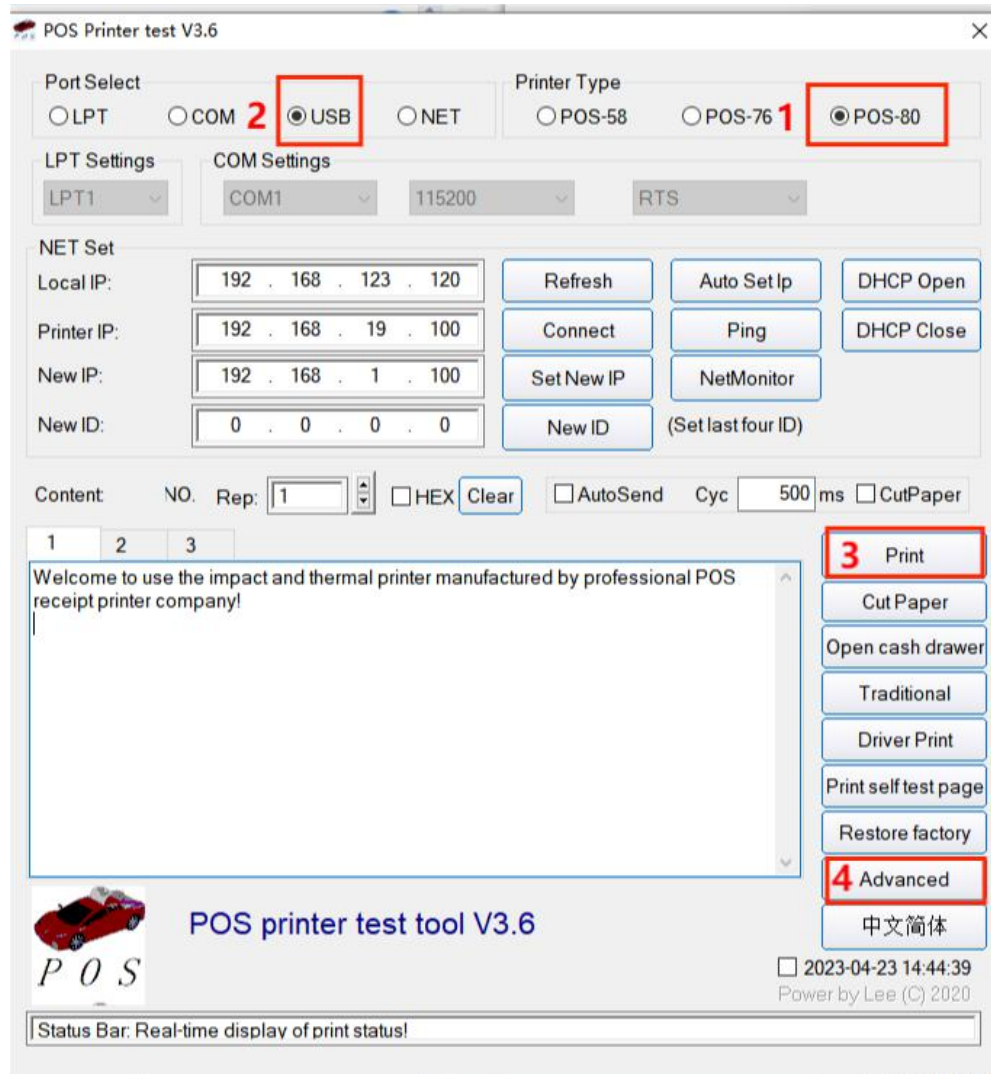

“1” Choose Printer Type: “POS-80”

“2” Choose “USB” Port

“3” Click the “Print” to test whether the printer is working.

“4” After doing the above settings, the printer is tested to be working. Then click the “Advanced”, and the corresponding window could be popped up.

2 . Click the “Advanced” . Then the corresponding window is popped up. See the picture:

The 'Advanced' settings window contains various configuration options organized into sections:

- H Parameter Settings:** Print H, Set Delta (5), Black Mark Settings (Set 80 BlackMark, Set 76 BlackMark).
- Code page Settings:** PrintCodePage, SetCodePage (0:PC437(Europe)), File data send (Open File send).
- NV Logo Test:** NV Download (1c 70), NV Download (1d 28), Cut With Beep (Cut With Beep Set).
- Barcode Printing test:** Print BarCode, UPC_A, 129, Height, Width Settings (Set Width, 72mm).
- P76 Buzzer Settings:** Set Buzzer (OFF), Set Paper saving, Close lid cut paper (Set, Not cut paper).
- P76 Density Settings:** Set (NORMAL), Density Settings (Set Density, 5).
- P80 Black sens:** Set Sensitivity (12), 12, SensH, Sound and light alarm (Set, OFF).
- baud rate settings:** Set BaudRate (19200), (Only P58 and P76E), Take paper timeout(s) (10), Alarm timeout(s) (300).
- DIP Settings:** Set P58 DIP, Set P80 DIP, Set P76 DIP, Language settings (Language Set).
- 2D Barcode test:** Print 2D Barcode, Replay settings (Replay Set, ON).
- Net Settings:** Set Net, **Set Bluetooth** (highlighted), Queuing settings (Queuing Set).
- USB MODE Settings:** USB Printing, Virtual COM, InputBox Codepage (936 - Chinese Simplified(GB2312), SET).
- USB port settings:** Fix USB, Random USB, Program upgrade (Program upgrade).

3. Click the “Bluetooth Set”, and follow the steps to set up the Bluetooth information. See the following pictures:

The 'Bluetooth Settings' dialog box contains the following fields and controls:

- settings** (header)
- BT NAME:** Printer001 (labeled 1) with a checkbox.
- BT PINKEY:** 123456 (labeled 2) with a checkbox.
- BT USER:** (empty text area) with a checkbox.
- Set** button (labeled 3) at the bottom.

“1” Set up the Port name of the Bluetooth Printer (the Factory Default BT NAME is “Printer001”)

“2” Set up the Password of the Bluetooth Printer (the Factory Default BT PINKEY is “123456”)

“3” After doing the above settings, click “Setting”, and then finished the settings of Bluetooth printer Parameters.

More specific details please refer to “Wireless Thermal Receipt Printer (User Manual)” .